User Manual



Alarm System Safe Home

Alarming system « Total »

Method 1: Press ★ button and enter your secret code.

Method 2: Press ★ button and show your tag in front of the 🌑 .

The siren of the control panel emits **a lot of audibles** signals to confirm the function.

Alarming system « Partial »

Method 1: Press button and enter your secret code.

Method 2: Press **b** button and show your tag in front of the **b**

The siren of the control panel emits **a lot of audibles** signals to confirm the function.

Disarming system

Method 1: Enter your secret code.

SOS

Press (1) and (1) at the same time (Silent Alert).



Recording / Modification secret code

Press on the User Number of your choice (1 to 9) until the two signals

Master code	new secret code	new secret cod	Wait the 2 signals	The lights are turning

Please make a test

Recording / Modification tag

Press on the User Number of your choice (1 to 9) until the two signals

1 1033 Off the Osof Nathbol of your offolio (1 to 3) after the two signals						
Master code	show the tag in front of	Wait the 2 signals	The lights are turning			

Please make a test

Disabling an user (code + tag)

Press on the User Number of your choice (1 to 9) until the two signals

Trees on the esert turnser of your energy (1 to 6) until the two signals						
Master code	(19)	Wait the 2 signals	The lights are turning			

Please make a test

Alert by duress code

You also can alert your Protectas Monitoring Center (RCC) in case of arming or disarming your system under threat of force. For this purpose, just add «1» to the last digit of your code. Example of a disarming of the total zone under threat of force: 1234 => 1235, 6789 => 6780).

The LEDs of the control panel show the status of your security system.

























LED indicator «AC mains power»

On: The Control Panel is supplied from the mains.

Off: The Control Panel is out of service and the battery is low.

Flashing: There is a mains power failure - The Control panel is supplied by built-in battery.





LED indicator «System Armed»

On: The system total set is armed.

Off: The system is disarmed.

Flashing: The system part or annex set is armed.





LED indicator «Detector Activated»

Flashing: It means that one of the window or door protected by a magnetic contact is opened.

It flashes until the window or door has been closed.





LED indicator «Alarm Memory»

On: It means that an intruder alarm occurred while the system was armed.

Flashing: It means that an alarm occurred while the part set or annex set was armed.

The indicator remains ON until the next arming.





LED indicator «Technical Fault»

On: It indicates a fault on a technical channel.

Flashing: It indicates a fault on the system. (Battery fault, Supervision, Tamper, Phone line failure

or Radio jamming).

The indicator remains ON or FLASHING until the condition has been cleared.

Keyfob

The keyfob has 4 buttons and 3 LED indicators. The LEDs show the status of your alarm system.

Alarming system « Total »

Press the ** button during 1 second.

Disarming system

Press the 111 button during 1 second.

Alarming system « Partial »

Press the 1 button during 1 second.

If the system is activated, press 2 times this button to disarm.

What is the status of my alarm system?

SOS



Buttons * + * send an immediate alert when pressed simultaneously for 2 seconds.

All the LED indicators are flashing: you did something wrong. Please try again as soon as all the LED Indicators turn off.

Without the document «customer data form» and your keys unfortunately we cannot activate your security system.

Please send it in a padded envelope and per registred mail (LSI) to:

Protectas SA, Impasse Colombelle 8, 1218 Le Grand-Saconnex (if you are living in the French-speaking part of Switzerland)

Protectas SA, Buckhauserstrasse 26, 8048 Zurich (if you are living in the German or Italian-speaking part of Switzerland)

Safe Home SA, rue de Genève 70, 1004 Lausanne tel 0848 848 555 · fax 0848 848 556 · www.safehome.ch

